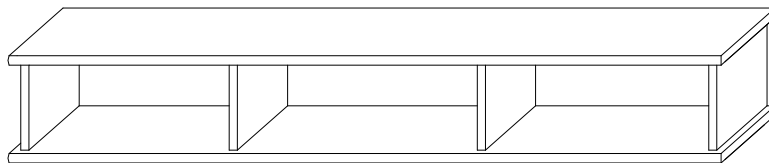


HOME DECORATORS — *collection* —

BF-24648 OXFORD HUTCH 47.5"W 3 CELLS










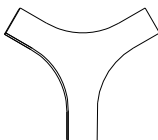

ASSEMBLY INSTRUCTIONS

Made In China





Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware and compare with parts list to ensure all parts are present. If any parts are missing or damaged, please phone, fax, or mail to our Customer Service Department. For efficient and speedy service please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.



PARTS LIST		
A  TOP PANEL-1PC	B  BOTTOM PANEL-1PC	C  SIDE PANELS-2PCS
D  STAND PANELS-2PCS	E  BACK PANEL-1PC	F  CAM-BOLTS-16PCS
G  CAM-LOCKS-16PCS	H  SCREWS-18PCS	I  EVA MATS-8PCS
J  CAM-TOOL-1PC	K  PLATES-2PCS	

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

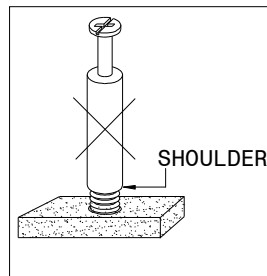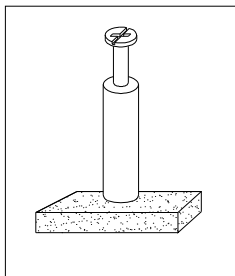


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

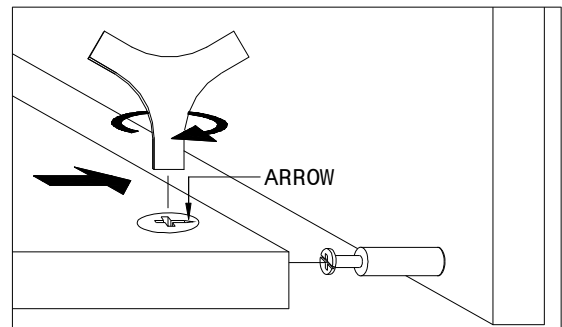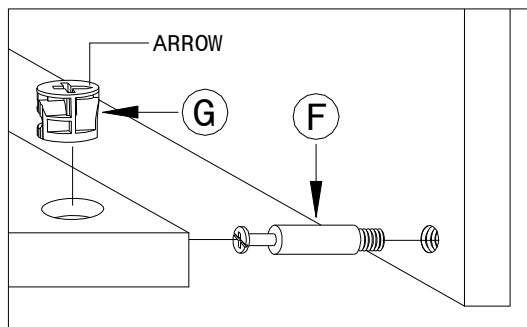


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

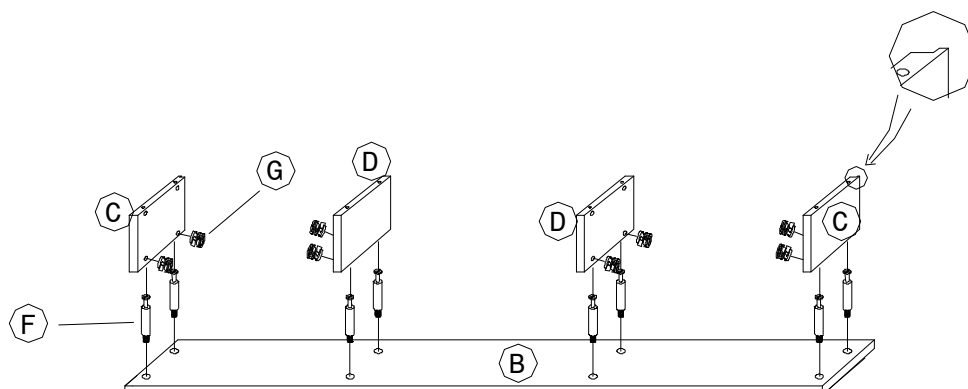


1) . ASSEMBLE THE BOTTOM PANEL(B) .

- ROTATE 8 CAM-BOLTS(F) INTO HOLES IN BOTTOM PANEL(B) .
- PLACE CAM-BOLTS(F) INTO HOLES IN PANELS(C/D) AND ATTACH USING 8 CAM-LOCKS(G) .

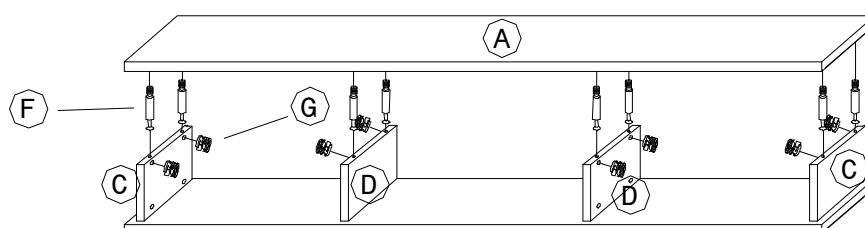


2) . ASSEMBLE THE TOP PANEL(A) .

- ROTATE 8 CAM-BOLTS(F) INTO HOLES IN TOP PANEL(A) .
- PLACE CAM-BOLTS(F) INTO HOLES IN PANELS(C/D) AND ATTACH USING 8 CAM-LOCKS(G) .

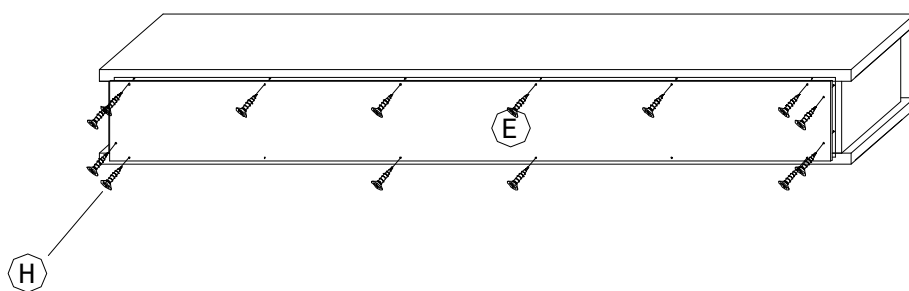


3) . ASSEMBLE THE BACK PANEL(E) .

- ATTACH THE BACK PANEL(E) USING 14 SCREWS(H) .

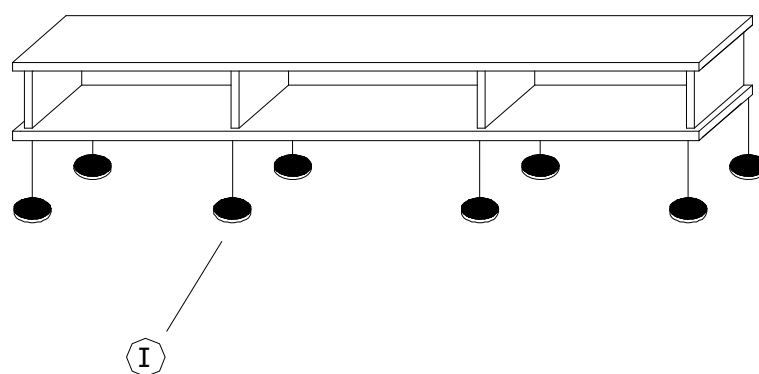

4) . ASSEMBLE THE EVA MATS(I) .

- ATTACH THE EVA MATS(I) TO BOTTOM PANEL(B) .

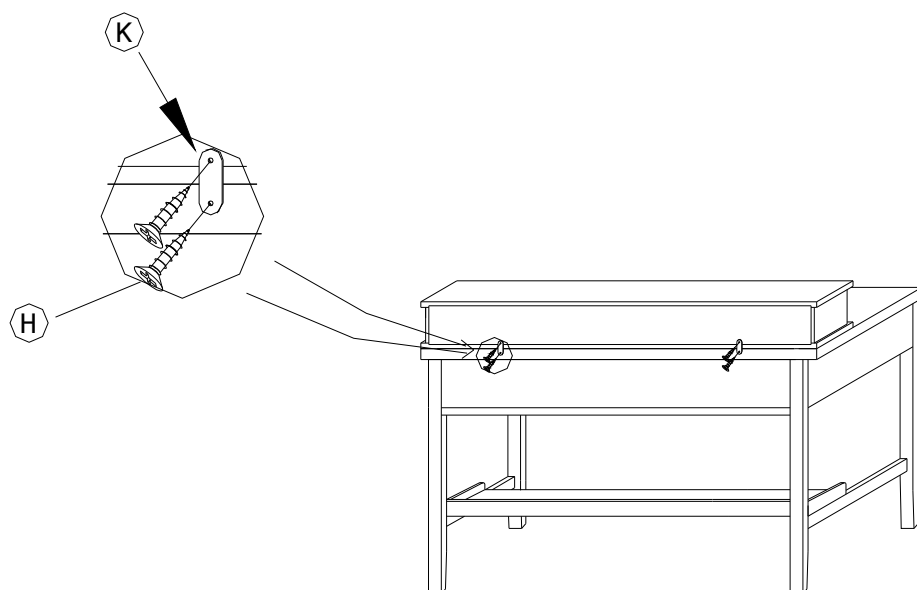

5) . ASSEMBLE THE PLATES(K) .

- ATTACH 2 PLATES(K) TO BACK PANEL(E) USING 4 SCREWS(H) .

